
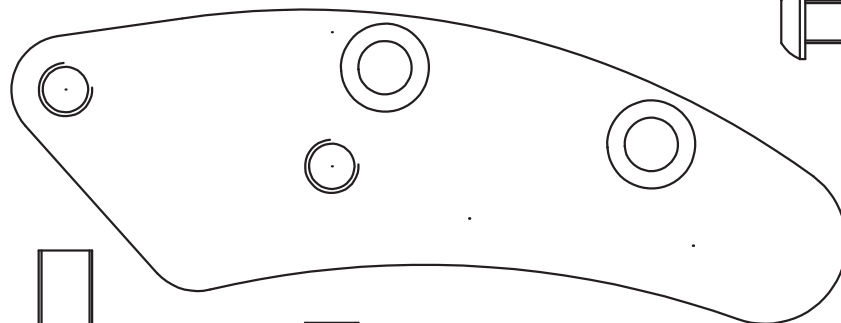


Indian Scout Bobber


Foot Control "60mm. Forward"

Extension Bracket

code 106110

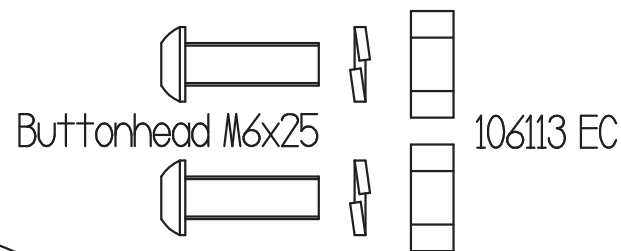


106110 B

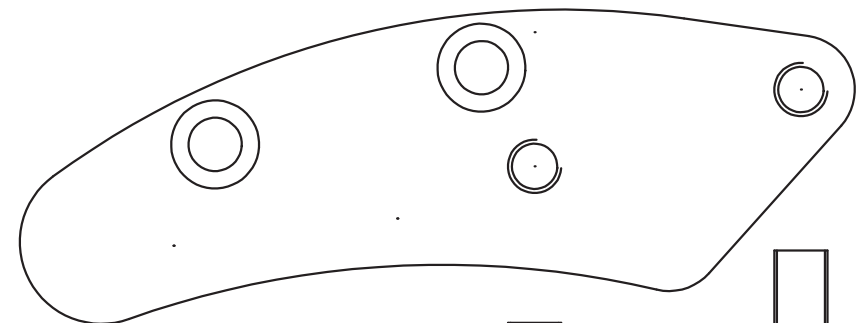

106110 A




Allenhead
M10x30

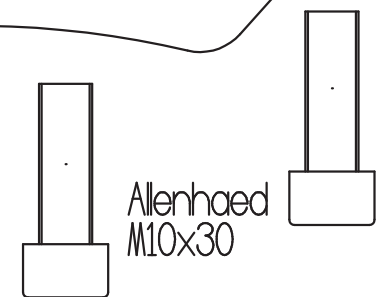

Allenhead
M10x30

106110 C



371.00mm.