
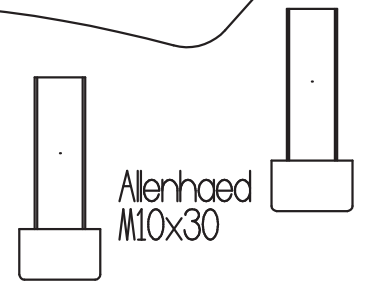
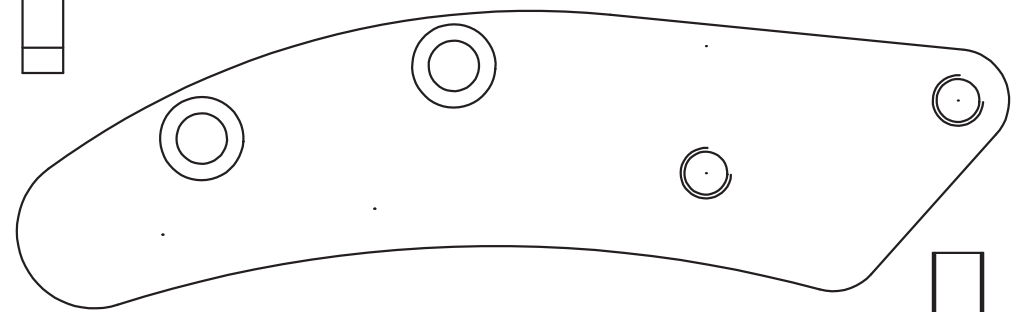
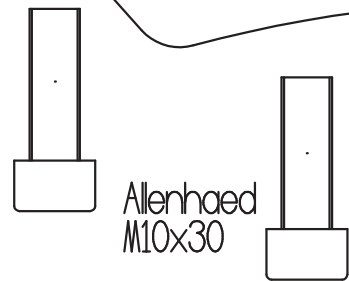
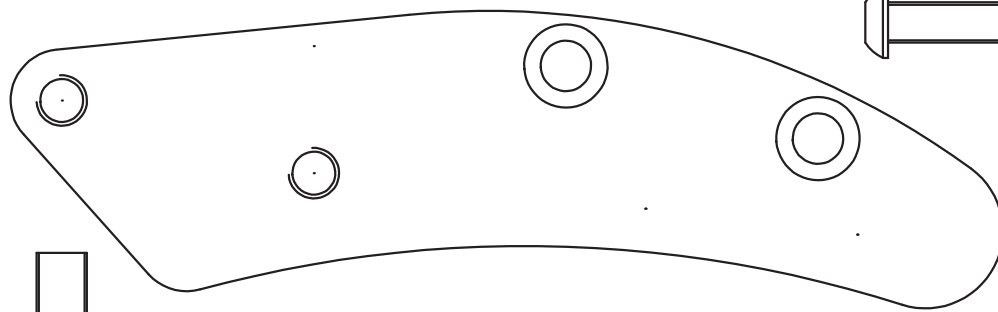


Indian Scout Bobber

Foot Control "100mm Forward"

Extension Bracket

code 106112

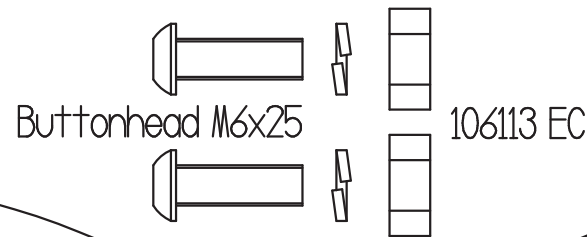

106112 C

