




XR1200 Knurled Footpegs

code 206904

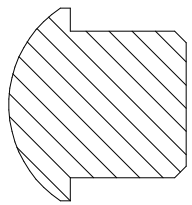


206904 AC

Bottomhead M8x40

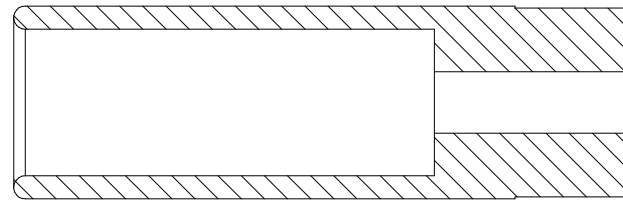


206904 AB

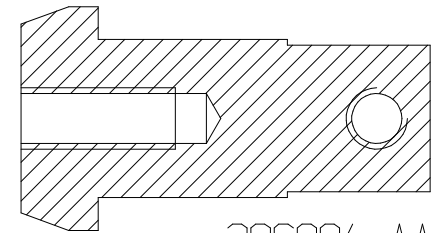


206904 AA


206904 AC

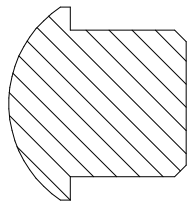

Bottomhead M8x40



206904 AB

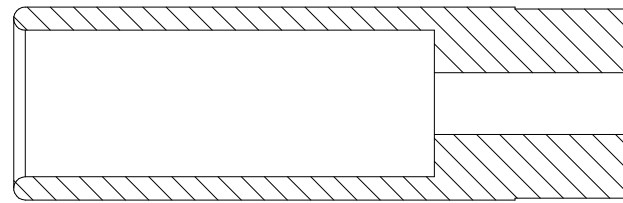

206904 AA

