



# Sportster mid Levers code 206912


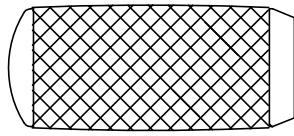


206912 E

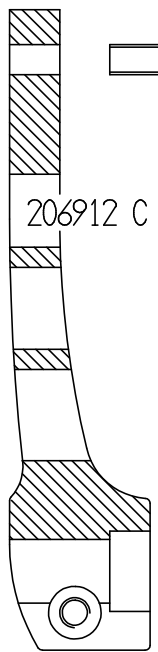


206912 C

Allenhead  
M6x25




Buttonhead  
M6x25


Allenhead  
M6x30





206912 B

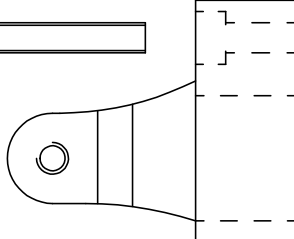

Buttonhead  
M6x25



206912 A

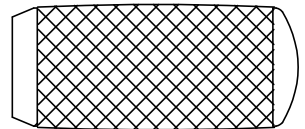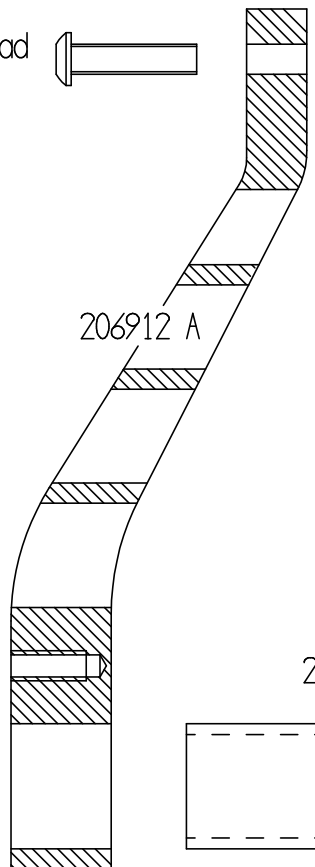

206912 E

206912 D

