



# Sportster forward Levers code 206913

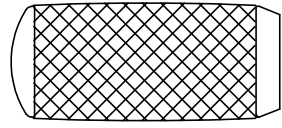

206913 E

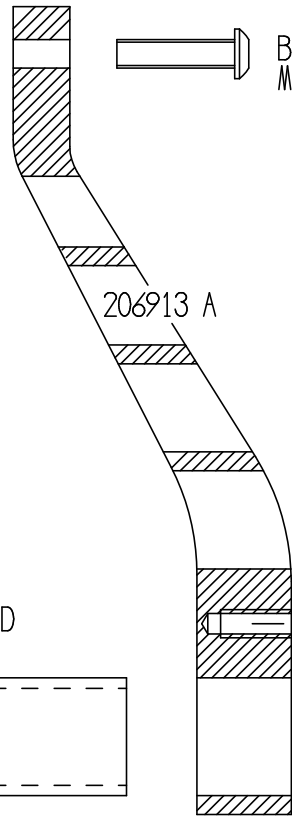

206913 A



206913 C

206913 D




Buttonhead  
M6x25

Buttonhead  
M6x25

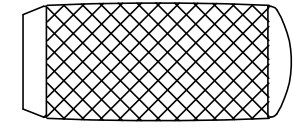


206913 E

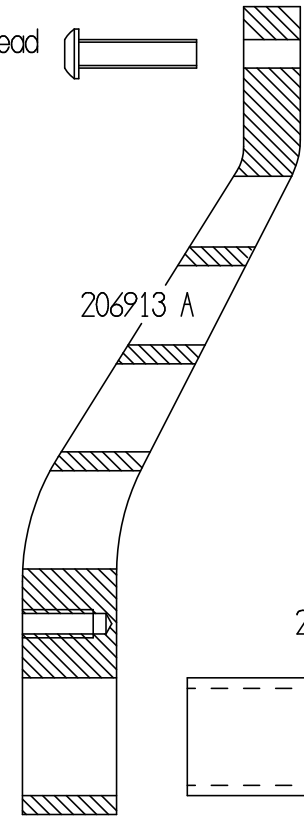

206913 A

206913 B

206913 D

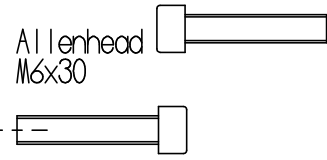

Allenhead  
M6x30

