



mounting instruction
Triumph 675 Street Triple Cafè Racer Kit
(Cod. 302205)
Appendix (cod. 302202)



Installation Time : 80 minute

Tools Requirement : 1) Open/End box Wrench 10 mm.
2) Allen Wrench 4 mm.
3) Socket Wrench 8 mm.



1



2

Remove headlight support.



3

Install dx bracket kit use m6 x 20.



4

Install sx bracket kit use m6 x 20.

ATTENTION ! Taking care to run cables
(instrumentation and headlamp) inside the bracket




5

Reinstall the headlights support using the M6 x 35.



6

Street Triple Forward instrumentation bracket Code 302205

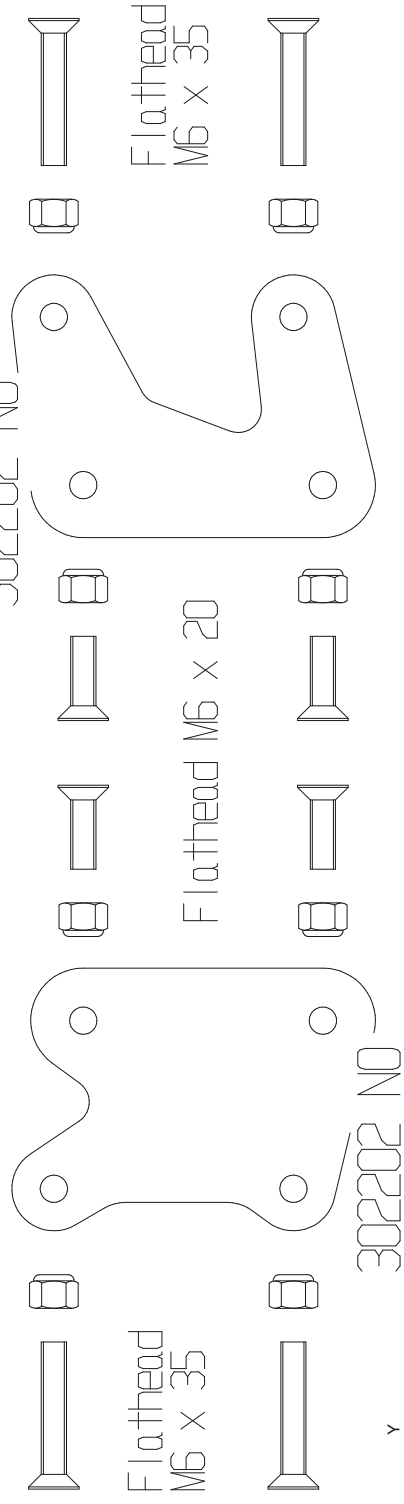

y
L
x