
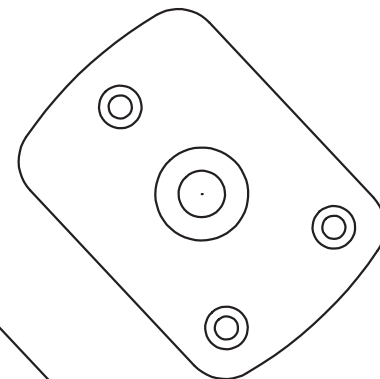


# Triumph Tiger 660


## Mobile Bracket

code 309020


Flathead  
M6x20




309023 C

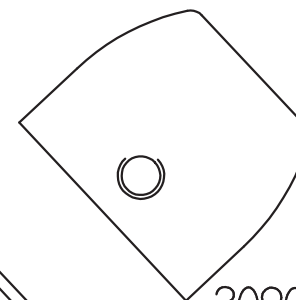


309023 BB

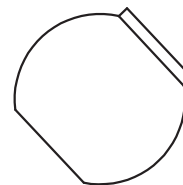


309023 BC

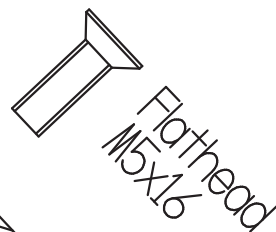

Flathead  
M5x16

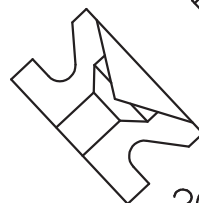

309020 B

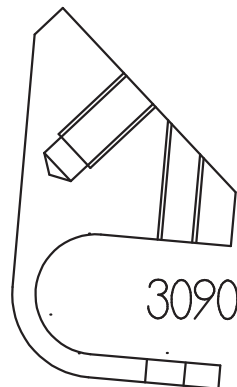

309020 A

Buttonhead  
M5x25

